

Call Sound System Assembly

Inside the box, there should be:

- Amplifier
- USB Stick – with swift call recording
- 2-part power cable with transformer
- Speaker wire with silver connector
- Speaker bracket
- Timer



Open the speaker box:

One hole is larger than the others, this is where the wire threads through.

Connect it with the straight connector in the box

One side of the wire has a line on it, this must be matched to the line on the connector wire.

The amplifier should be kept indoors

Drill a hole through the wall to allow the wire from the sound box to link to the amplifier indoors.

The speaker bracket is universal and the speaker should be placed with the holes facing down to prevent water ingress.

Use the two screws provided to screw the speaker to the supplied bracket.

Unscrew the wing nut on the side of your Genesis Swift Nest Box where the speaker will be fitted.

Slide the large hole in the bracket over the bolt at the side of the Genesis Swift Nest Box and replace the wing nut.

Plug the timer into the plug socket and then plug the amplifier into the timer.

Place the USB stick in the USB slot and switch the power on.

When the amplifier is switched on, it should automatically find the USB stick.

If it does not, press the MODE button until USB appears on the screen. The speaker will then activate.

Set the volume on the amplifier using the left and right buttons on the front of the amplifier. Please remember to consider your neighbours when setting the volume.

Once the unit is working, set the timer to the beginning and end time for the amplifier to be switched on.

Instructions for the timer will be included in your package.

You should now be playing the attractions calls for swifts.